




## Magnetic Sump Filter Kits

### Fitting Instructions

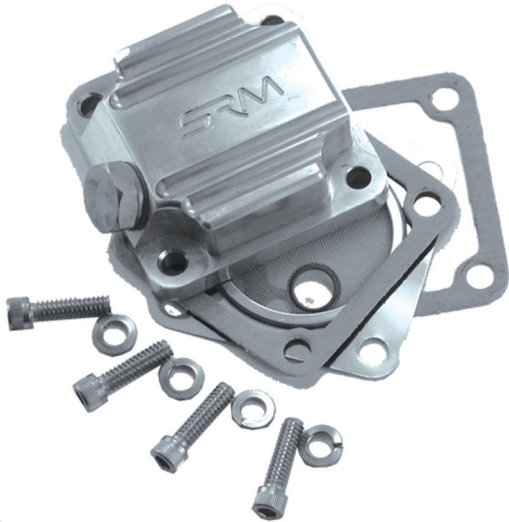

1. Remove old sump plate, and old studs
2. Clean the gasket face on sump
3. Fit your SRM magnetic sump filter, using the new gauze provided.
4. Make sure that the drain plug faces to the rear of your engine